



ICONS

○ Pager ON	☐ Current Message is a Duplicate
🔔 Beeping Alert	🔒 Message Locked
🔊 Vibrate Alert	📶 Out Of Range Indicator
🕒 Daily Alarm ON	🔋 Low Battery Indicator
🎵 Melody	▶ Message continues on next page
✉ Unread Message	

 
FUNCTION KEYS

⏪ Move to previous message	🔑 Message READ Key
⏩ Move to next message	🔑 ESCAPE (back to previous menu)

More information at www.k2wireless.com.hk

Getting Started

Power On - Insert the battery (AAA) into the pager. If the battery is in, press and hold the **READ Key** for 2 seconds. The pager will display the **STANDBY SCREEN**. After a short time, the display screen will go blank to preserve battery power. Press any key to return to the **STANDBY SCREEN**.




Power Off - Go to the **STANDBY SCREEN**. Hold the **ESCAPE Key** for 2 seconds to display the **SETTINGS Menu**. Using the **READ Key** or **KEYS**, scroll to the **☐** icon. Press the **READ Key** twice to confirm your choice. **Backlight** - Press and hold the **READ Key** to activate or deactivate.

Read Messages

The pager will display a new message when it is received. Each message is allocated a slot number (ie 01 , 02 , 03 etc). To read stored messages, press the **READ Key** from the **STANDBY SCREEN**. Scroll through messages with the **⏪** or **⏩** Keys and press the **READ Key** to confirm selection. You will be returned to the **STANDBY SCREEN** automatically if you scroll to the end of the message queue. If a message is longer than the screen width, the **▶** icon will be displayed. Use the **READ Key** to view the rest of the message.

Please Note: Not all of the functions explained in this guide may be enabled on all pagers. Contact your place of purchase for more information.

 
Message Display

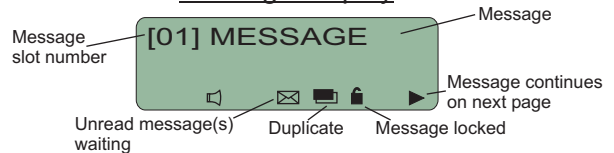

Delete messages

Whilst message is displayed - Hold the **ESCAPE Key** for 2 seconds to view the **DELETE MENU Screen**. Using the **⏪** and **⏩** Keys, select between **LOCK** (locks current message), **DEL X** (delete current message) or **D.ALL ALL** (delete all messages). Select **☐** (lock current message) to prevent the current message from being deleted. Press the **READ Key** to confirm selection. The **ESCAPE Key** takes you back to the **STANDBY SCREEN**.

 Settings Menu

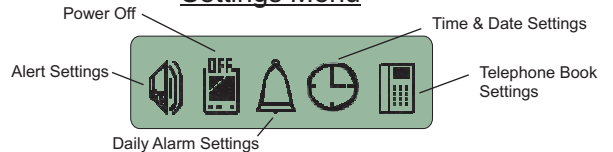

Hold the **ESCAPE Key** to select the **SETTINGS Menu**. Scroll through the menu using the **⏪** or **⏩** Keys. Press the **READ Key** to confirm your selection. Use the **⏪** or **⏩** Keys to modify options and the **READ Key** to proceed to the next option or to enter your changes. The **ESCAPE Key** takes you back to the **STANDBY SCREEN** without saving changes. **Note** : In the **TELEPHONE BOOK**, the **READ Key** must be pressed until it reaches the end of the **Name** field, before it will move along to the **Number** field.